



### HSX-20 PARTS LIST

KEY NO	PARTS NO	PARTS NAME	KEY NO	PARTS NO	PARTS NAME
100	21004504	Main body	705	27050206	Transmission gear
105-1	21056616	Pinion bearing fixed bushing	705-1	27050219	Transmission gear
105-2	21050090	Pinion bearing fixed bushing	708	27080179	Oscillatory slider
112	21120190	Foot label decoration	716	27160030	Oscillation slider plate
200	22004599	Side plate	718	27180783	Main shaft
201	22010964	Main body decoration	719	27190025	Click gear
300	23005174	Rotor	722	27220009	Click gear washer
301	23012267	Bail arm	725	27250032	Transmission gear bushing
304	23042842	Bail arm cover	800	28000437	Anti-reverse/anti-re lever
305	23050225	Kick lever	800-1	28000402	Anti-reverse/anti-re lever
307	23071863	Bail holder	801	28010024	Anti-re lever spring
309	23090051	Bail arm support pin	0910618	0910618	One way assy.
310	23100094	Compression spring	0910054	0910054	Ball bearing
313	23131797	Bail wire assy.	0910256	0910256	Ball bearing
315	23150086	Line roller	0910221	0910221	Ball bearing
316	23160014	Line roller bushing	0920590	0920590	Washer
317	23170024	Line roller washer	0920388	0920388	Washer
318	23180019	Rotor nut	0920600	0920600	Washer
320	23200124	Rotor balance weight	0920373	0920373	Washer
400	240015803	Spool assy.	0920237	0920237	Washer
405	24050042	Drag washer retainer	0930044	0930044	Screw
407	24070009	Extension spring	0930541	0930541	Screw
412	24120038	Spool bushing	09301453	09301453	Screw
500	25006383	Handle assy.	09301330	09301330	Screw
504	25040007	Handle screw cap washer	09301534	09301534	Screw
513	25130830	Handle cap	09301327	09301327	Screw
600	26004347	Drag knob assy.	0930438	0930438	Screw
610	26100133	Drag washer	09301072	09301072	Screw
612	26120006	Key washer	09301468	09301468	Screw
612-1	26120054	Key washer	09301454	09301454	Screw
700	27002078	Drive gear	0930429	0930429	Screw
702	27020951	Pinion gear	09301467	09301467	Screw