



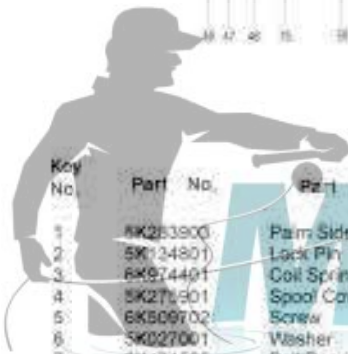

CERROS

CR-266V

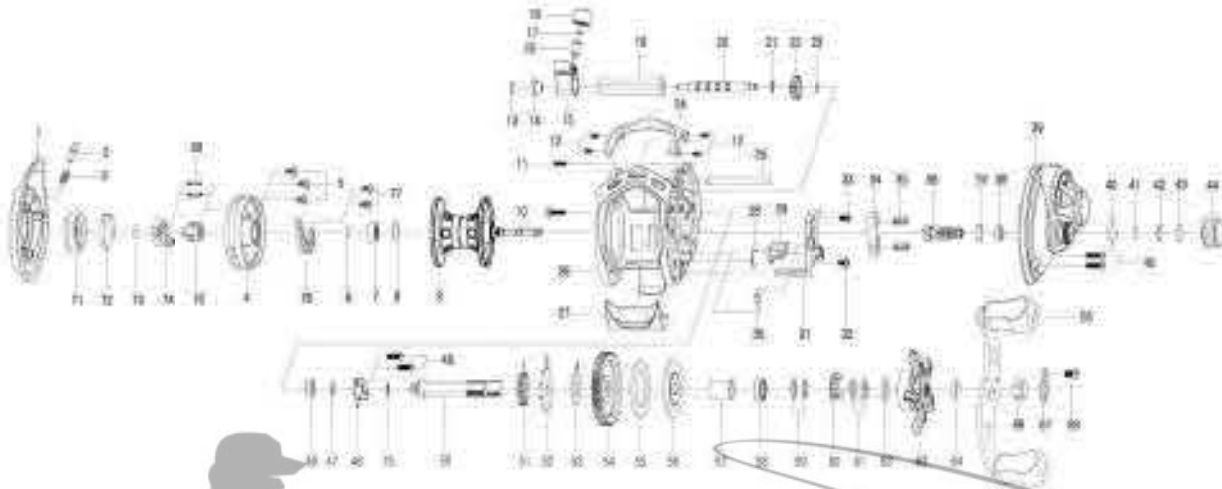

MIKE'S REEL REPAIR

Key No.	Part No.	Part Name	Key No.	Part No.	Part Name
1	6K263900	Palm Side Cover Assembly	39	6K131665	Gear Side Cover Assembly
2	6K124801	Lock Pin	40	6K175501	O-Ring
3	6K914401	Coil Spring	41	6K027001	Washer
4	6K271901	Spool Cover	42	6K178805	Collar
5	6K509702	Screw	43	6K177001	Washer
6	6K027001	Washer	44	6K154309	Tension Nut
7	6K474505	Ball Bearing	45	6K311315	Screw
8	6K468301	Ring	46	6K170601	Ball Bearing
9	6K279803	Spool Assembly (1 Ball bearing)	47	63201402	Retainer
10	6K311315	Screw	48	6K134901	Bearing Plate
11	6K311314	Screw	49	6K398604	Screw
12	6K155601	Screw	50	6K093603	Gear Metal
13	6B336801	Retainer	51	6K258101	Gear
14	6K456801	Bush	52	6K893602	Ratchet
15	6K238002	Level Wind Assembly	53	6K027101	Washer
16	6K256501	Level Wind Pin	54	6K131301	Drive Gear
17	6K148801	Washer	55	6K039905	Washer-L
18	6K704403	Level Wind Nut	56	6K040001	Washer-D
19	6K456403	Pipe	57	6K859205	Bush
20	6K095604	Worm Shaft	58	6K562201	Ball Bearing
21	6E096503	Washer	59	6K177302	Washer
22	6K489301	Worm Pinion	60	6K259201	Leaf Spring Assembly
23	6B336801	Retainer	61	6K027201	Spring Washer
24	6K130817	Hood	62	6K193601	Washer
25	6K930403	Pillar	63	6K1339A3	Star Drag
26	6K130329	Frame Assembly	64	6K199101	Washer
27	6K977206	Thumb Bar Assembly	65	6K284505	Handle Assembly (4 Ball bearing)
28	6K118001	Kick Lever Spring	66	6K047102	Handle Nut
29	6K130601	Kick Lever	67	6K005002	Handle Nut Retainer
30	6K093401	Clutch Cam Spring	68	63520407	Screw
31	6K130701	Clutch Cam	69	6K100501	Coil Spring
32	6K723502	Screw	70	6K284701	Slide Cam-A
33	6K723502	Screw	71	6K0446A1	Control Dial
34	6K093701	Clutch	72	6K974701	Leaf Spring
35	6K942601	Coil Spring	73	6K180201	O-Ring
36	6K131001	Pinion	74	6K137901	Slide Cam-B
37	6K170701	Ring	75	6E096501	Washer
38	6K304001	Ball Bearing	76	6K102301	Magnet Holder Assembly
			77	6K047001	Tap Screw